



# REMOVAL

## 1. REMOVE OUTER MIRROR

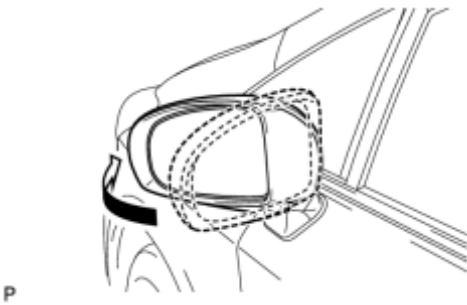

(a) Push the outside part of the outer mirror assembly and tilt it as show in the illustration.

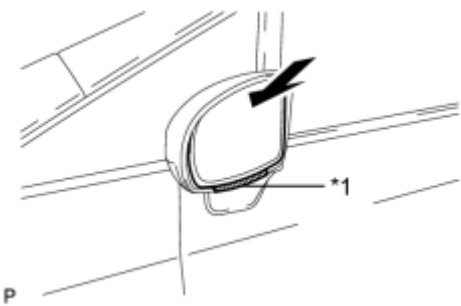


(b) Push the upper part of the mirror surface and tilt it.

(c) Apply protective tape as shown in the illustration.

*Text in Illustration*


*1	Protective Tape
----	-----------------

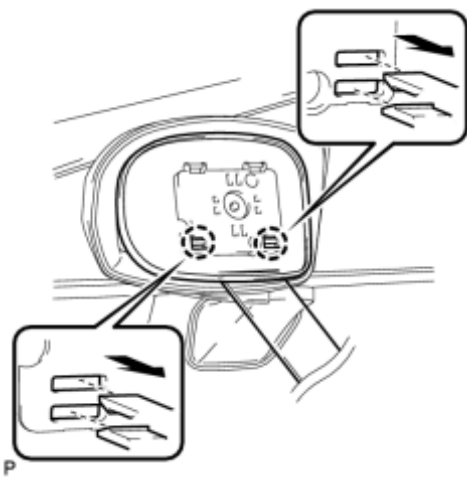

(d) Using a moulding remover, disengage the 2 claws at the lower part of the outer rear view mirror, and separate the outer rear view mirror glass.


(e) w/o Mirror Heater:

(1) Disengage the 2 guides at the upper part of the outer mirror.

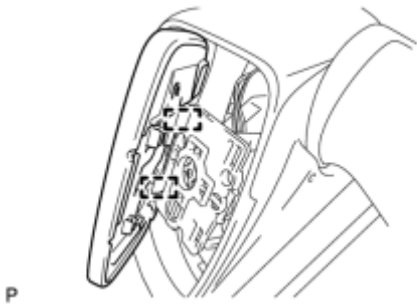

(2) Remove the outer mirror.

(f) w/ Mirror Heater:

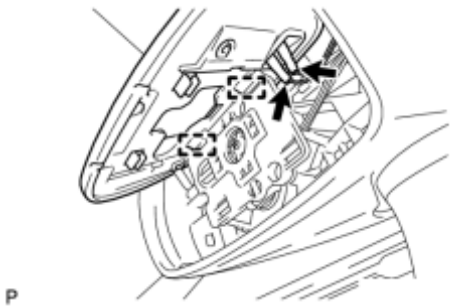


(1) Disengage the 2 guides at the upper part of the outer mirror.

(2) Disconnect the 2 connectors and remove the outer mirror.

# INSTALLATION


## 1. INSTALL OUTER MIRROR

(a) w/o Mirror Heater:

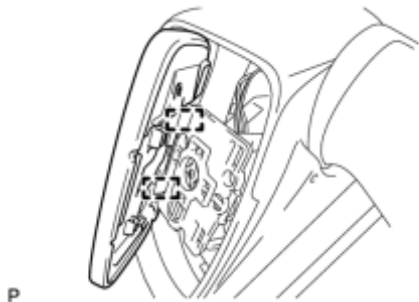


(1) Engage the 2 guides on the upper part of the outer mirror to the outer rear view mirror.

(b) w/ Mirror Heater:

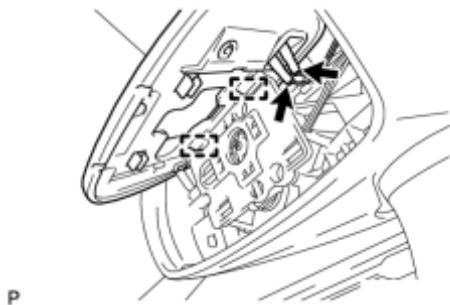

(1) Connect the 2 connectors.

(2) Engage the 2 guides on the upper part of the outer mirror to the outer rear view mirror.

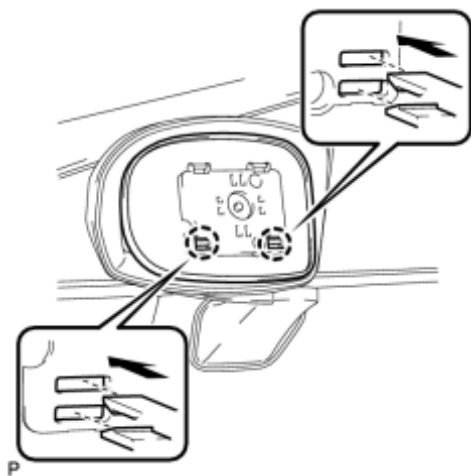

(c) Engage the 2 claws on the lower part of the outer mirror to the outer rear view mirror as shown in the illustration.

(d) Push the outside part of the outer mirror assembly and tilt it as show in the illustration.

P

