

Last Modified: 5-3-2010	6.4 A	From: 200904
Model Year: 2010	Model: Prius	Doc ID: RM00000304Q00DX
Title: 2ZR-FXE ENGINE CONTROL: IGNITION COIL AND SPARK PLUG: REMOVAL (2010 Prius)		

REMOVAL


1. REMOVE WINDSHIELD WIPER MOTOR AND LINK

- (a) Remove the windshield wiper motor and link [INFO](#).

2. REMOVE OUTER COWL TOP PANEL SUB-ASSEMBLY [INFO](#)

3. REMOVE NO. 2 CYLINDER HEAD COVER [INFO](#)

4. REMOVE IGNITION COIL ASSEMBLY

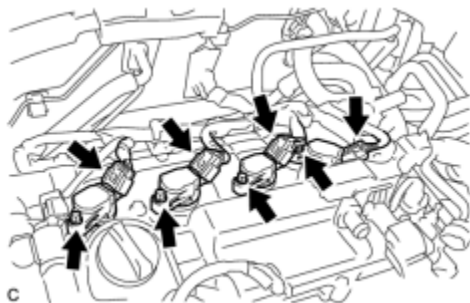


- (a) Disconnect the 4 ignition coil connectors.

- (b) Remove the 4 bolts and 4 ignition coils.

NOTICE:

When removing each ignition coil, do not damage the plug cap on the engine head cover opening or the upper edge of the spark plug tube.

5. REMOVE SPARK PLUG

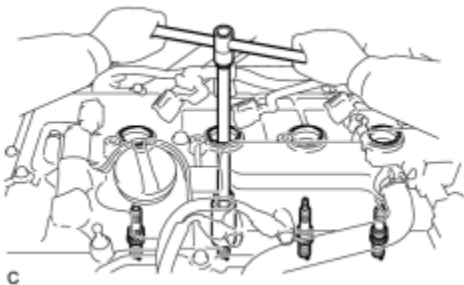

- (a) Using a 14 mm spark plug wrench, remove the 4 spark plugs.

