

# MIRROR (INT): INNER REAR VIEW MIRROR: REMOVAL (2010 Prius)


Thursday, July 08, 2010  
8:38 PM

<b>Last Modified:</b> 5-3-2010	6.4 A	<b>From:</b> 200904
<b>Model Year:</b> 2010	<b>Model:</b> Prius	<b>Doc ID:</b> RM000001PGI022X
<b>Title:</b> MIRROR (INT): INNER REAR VIEW MIRROR: REMOVAL (2010 Prius)		

## REMOVAL

### 1. REMOVE INNER REAR VIEW MIRROR COVER (w/ EC Mirror)

#### (a) w/o Rear View Monitor System:

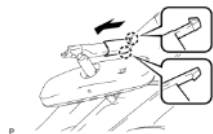


(1) Disengage the 2 claws and slide the inner rear view mirror cover as shown in the illustration.




(2) Disengage the 6 claws and remove the inner rear view mirror cover.

#### (b) w/ Rear View Monitor System:

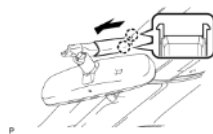

(1) Disengage the 2 claws and slide the inner rear view mirror cover as shown in the illustration.

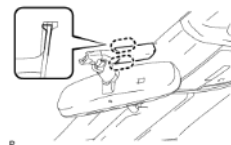


(2) Disengage the 2 claws and remove the inner rear view mirror cover.

### 2. REMOVE INNER REAR VIEW MIRROR ASSEMBLY (w/o EC Mirror)



(a) Disengage the 2 claws and disconnect the inner rear view mirror cover.

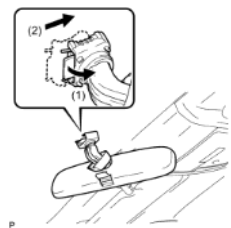

(b) Remove the inner rear view mirror as shown in the illustration.

### 3. REMOVE INNER REAR VIEW MIRROR ASSEMBLY (w/ EC Mirror)

#### (a) w/o Rear View Monitor System:



(1) Disconnect the connector.

 
(2) Using "TORX" socket wrench (T20), remove the screw and inner rear view mirror assembly.

(b) w/ Rear View Monitor System:



(1) Disconnect the connector.

(2) Using "TORX" socket wrench (T20), remove the screw and inner rear view mirror assembly.



Inserted from <mhtml:file:///D:/My Documents/Automotive/2010 Prius/Repair Manual/Vehicle Interior/Mirror (INT)/Inner Rear View Mirror/MIRROR (INT) INNER REAR VIEW MIRROR REMOVAL (2010 Prius).mht>